

**\* Recording Voice Message**

1. Press **MESSAGE** button
2. Press **ENTER** button
3. The Dialer will sound bip - bip for 2 seconds, it means the dialer is ready for recording message for 20 seconds. Speak to the MIC as possible as clearly
4. At the end press the **ENTER** button

Notice: If the message lasts 20 seconds, Pressing enter is not necessary.

**\* Playback Voice Record Message**

1. Press **MESSAGE** button
2. Press **CHECK** button
3. The message will be played by speaker automatically.

**\* Entering Phone Numbers**

1. Press **MEM** button
2. Press the number of the memory (1-20) button  
(1 is mean the first alarm number, 20 is mean the 20th (last) alarm number)
3. Press **ENTER** button
4. Enter the phone number that you want (at most 16 digits) and press **ENTER** button by end
5. Saved shows that the number is entered in the memory.

Notice : if you don't want entering phone number any more, you should just press **\***

Notice: entering every # between numbers causes 2 seconds of pause at the time of dialing , this capability is usefully when device pauses between code and phone number.

Notice: if the phone number that you entered is 16 digits , you don't need to press the enter at the end of the number and device will automatically enter the number in the memory.

Notice: dialer at the time of dialing, for example: If you only put 8 memories of alarm number, then the dialer will dialer the these number only, and delete empty memories. so you do not need to program the numbers .

CE

# CLASSIG

## AUTO DIALER PRO - DOUBLE

|                               |  |
|-------------------------------|--|
| LCD Display with back light ◀ | 20 telephone numbers ◀                   |
| Full SMD Technology ◀         | 20 Second Recording Message ◀            |
| Alarm Memory ◀                | 2*10 memory, Double Message model ◀      |
| Alarming Report ◀             | Two Trigger Model: Level/ Edge Trigger ◀ |
| Two Trigger input: (+/-) ◀    | Two Dialing Model: Tone(FTMF)/Pulse ◀    |

**\* Check Alarm Phone Number**

1. Press **MEM** button
2. Enter number of the memory (1-20) button
3. Press **CHECK** button

Notice: Pressing **CHECK** again, it will display next memory of alarm number.

Notice: After showing the 20th memory, dialer display will show the setting including type of dialing system and type of trigger.

**\* Test of Dialing**

Practical test of entered phone number:

1. Press **MEM** button
2. Enter the number of the memory (1-20) button
3. Press **MESSAGE** button

Dialer will dial the number which exists in the memory and plays message for 2 times.

After dialing, you can stop playback voice record message by pick up the phone or you can press **ENTER** button and pause for several seconds.

But pressing **ENTER** button at the time of dialing, dialer will still dialing, do not have any result.

**\* Delete Alarm Phone Number:**

1. Press **MEM** button
2. Enter the number of memory (1-20) button
3. Press **ENTER** button twice.

Notice: Power off of the dialer all the information will not be deleted.

### Quick lunch (One message mode)

**CLASSIG AUTO DIALER PRO**

|   |              |                    |               |  |
|---|--------------|--------------------|---------------|--|
| 5th stage 4th stage 3rd stage 2nd stage 1st stage ← |              |                    |               |  |
| ENTER   | phone number | ENTER              | memory (1-20) | MEM Add number                         |
| press CHECK button see the next                     |              |                    | CHECK         | MEM Check number                       |
| Device will start to dial                           |              | MESSAGE            | memory (1-20) | MEM Test of dialing                    |
| ENTER   |              | ENTER              | memory (1-20) | MEM Delete alarm number                |
| record message 10sec                                | ENTER        | Choose message 1,2 | ENTER         | MESSAGE Recording voice message        |
|   |              |                    | CHECK         | MESSAGE play back voice record message |



**\* Delete all of the memories and message**

1. Disconnect the power of dialer.
2. Press **ENTER** button for several seconds
3. Connected the power of device
4. After showed RESET on LCD, release **ENTER** button.

In this way, all of phone numbers and message will be deleted and the dialer settings will be reset to default setting.

**\* Mode of the TRIGGER**

**Trigger mode 1: LEVEL TRIGGER:**

In this mode, once the time of trigger signal stop (the time of siren stop), then dialer doesn't dial again.

To make this part activated:

1. Press **MEM** button
2. Press **#** button for 3 time
3. Press **3** button
4. LEVEL TRIGGER will be showed on LCD.

**Trigger mode 2: EDGE TRIGGER:**

In this mode, once the time of trigger signal stop (the time of siren stop), dialer will be dial all of the phone number in memory.

To make this part activated:

1. Press **MEM** button
2. Press **#** button for 3 times
3. Press **4** button
4. EDGE TRIGGER will be showed on LCD.

In this mode, if you want stop dialing as soon as possible you should be press **ENTER** button for several seconds until the dialer exits from the trigger mode with the dialer sound of one bip. Maybe this action lasts several seconds.

Notice: dialer default setting is Level trigger mode 1.

So for using this mode you don't need to program the dialer

Notice: In each of two trigger mode, TRIGGER signal lasts for 3 seconds.

Notice: In each of two trigger mode dialed number wouldn't be abandoned uncompleted.

**\* Turning off LCD:**

Dialer's LCD display 2 minutes after every activity turns off monitor. For turning on the monitor press any key.

**\* Test of Alarm:**

If the negative wire of trigger connects to Terminal T2, or positive wire connect to T 1 for 3 seconds, dialer with sounds of bip and It will start dialing. After every dialing, dialer will playback voice message 2 times.

**\* Alarm Status of SIREN:**

At the time of dialing after every playback of voice message if siren continues, dialer will sound 3 bip remind user, and if siren stops, dialer will sound one bip for remind of user of the alarm status.

**\* Memory of Alarm:**

Any triggered alarm happened when you are away, dialer will showing ALARM on LCD remind of user. These remind will be clear by press each of dialer button

**\* Dialing system:**

Dialer has two kinds of dialing mode: Tone Dialing and Pulse Dialing

**TONE DIALING:**

For making this mode activated just

1. Press **MEM** button
2. Press **#** button for 3 times
3. Press **1** button
4. TONE DIALING will be showed on LCD.

**PULSE DIALING:**

For making this mode activated just:

1. Press **MEM** button
2. Press **#** button for 3 times
3. Press **2** button
4. PULSE DIALING will be showed on LCD.

Notice: dialer default setting is in tone dialing mode, so for using of this mode you do not need to program the device.

**connecting the -12v to connector(-)**  
**connecting the +12v to connector(+)** **12V**


positive(+) trig connector. it can connect (siren+) of alarm system **T1+**  
negative(-) trig connector **T2-**

NOTICE: please connect the power supply first later connect the trigger

**Telephone Line Connector** **Tel**



Connection the auto dialer to alarm system

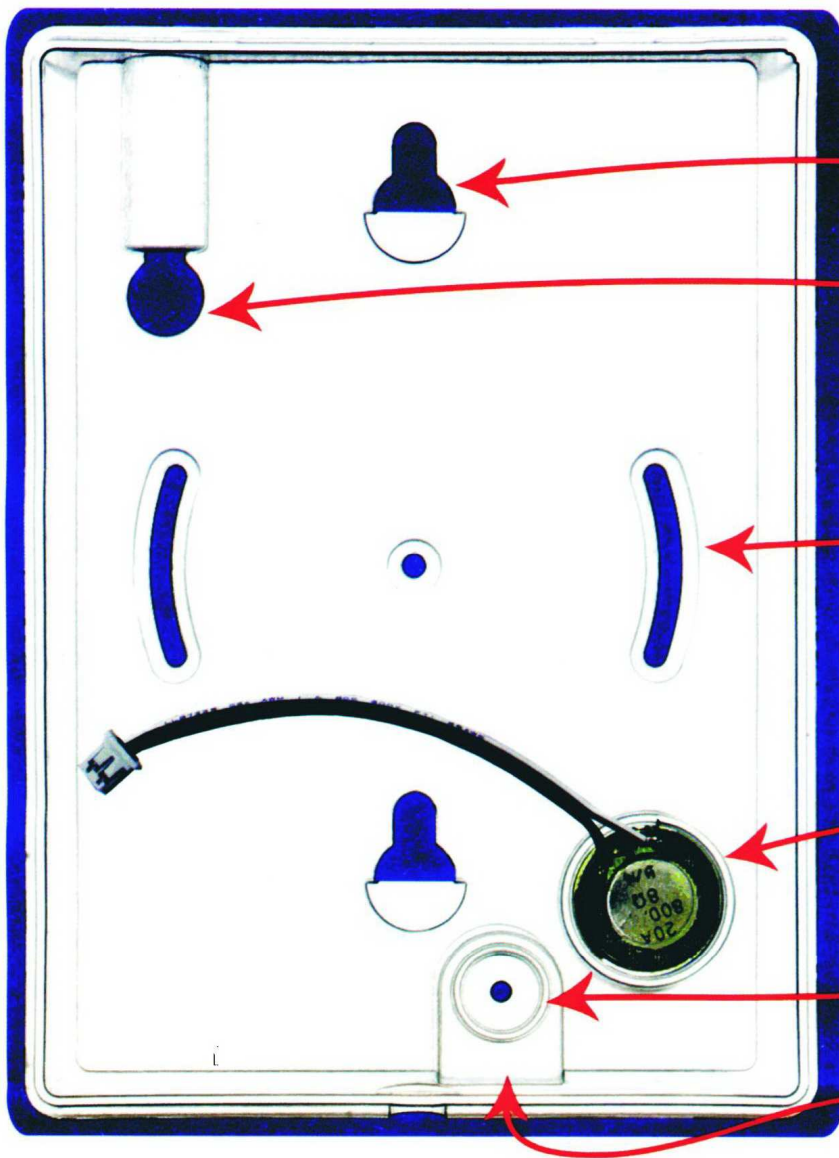

**Original size for drilling**

**The hole for screw fixing**

**The incoming main cable**

**The hole for screw fixing.**  
**notice: please use the flat head screw take care not damage for PCBboard.**

**Speaker:**  
**before close the auto dialer please fix the connector**

**Micro phone location do not cover this hole**

**Sound pathway from the bottom**

## Mounting The Auto Dialer

1. Open the bottom screw.
  2. Fix the back panel on the wall
  3. The incoming main cable should follow the path and connect to terminal.
  4. Fix the speaker connector.
  5. Close the device and fix the bottom screw.
- Notice: please do not cover the microphone sound pathway**